

Keep in mind the following points while transporting and placing of concrete:


01




While transporting the mixture, there should be no jerks, the concrete should be placed in the shuttering within 30 minutes of pouring water in it.

02

While pouring the concrete ensures that the height is not more than 1 meter. If the height is more, use chutes for the same.

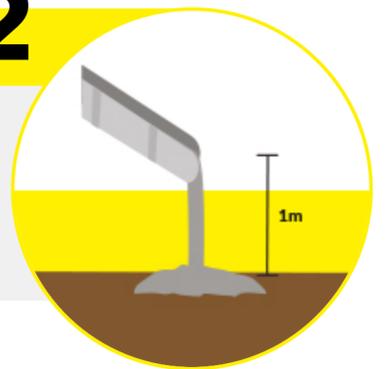

03

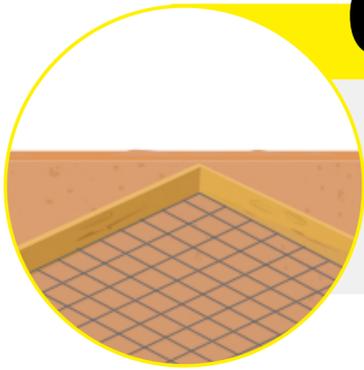

Take note that, while placing the concrete, the alignment of the formwork should not be disturbed or shaken.

04

If you are doing slab concreting, start placing the concrete from one corner of the formwork.



05



If the slab is sloping, always start the work from the side of a slope.
Note: Use lesser water for such type of work.



For more information on home-building, click here.