

Some effective tips to avoid cracks:


01



Never place a concrete on a dry shuttering, always make the shuttering wet.

02

It is better to do concrete placing in the morning or in the evening.

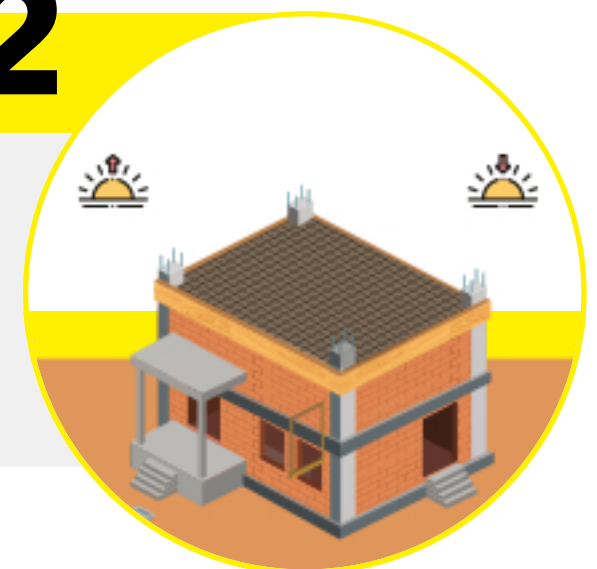


03



When placing and setting concrete, keep it away from sunlight and strong wind, for this you can use tarpaulin.

04

Do not let the wetness of the surface get dried and keep on curing it from time to time.

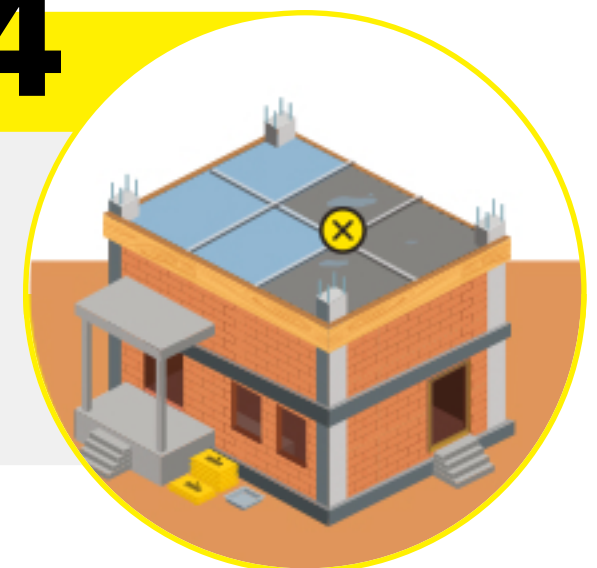

For more information on home-builing, [click here](#).